


SINGLE LOWER STABILIZER BAR FOR the E-Z UP CANOPY
(Fits all Pop-up Canopies)
Instructions for Assembly

PARTS LIST:

- (2) StaBar Ell Joints
- (1) Male Pole Section
- (1) Female Pole Section
- (2) Thumbscrews (thread into nuts on Ell joints)

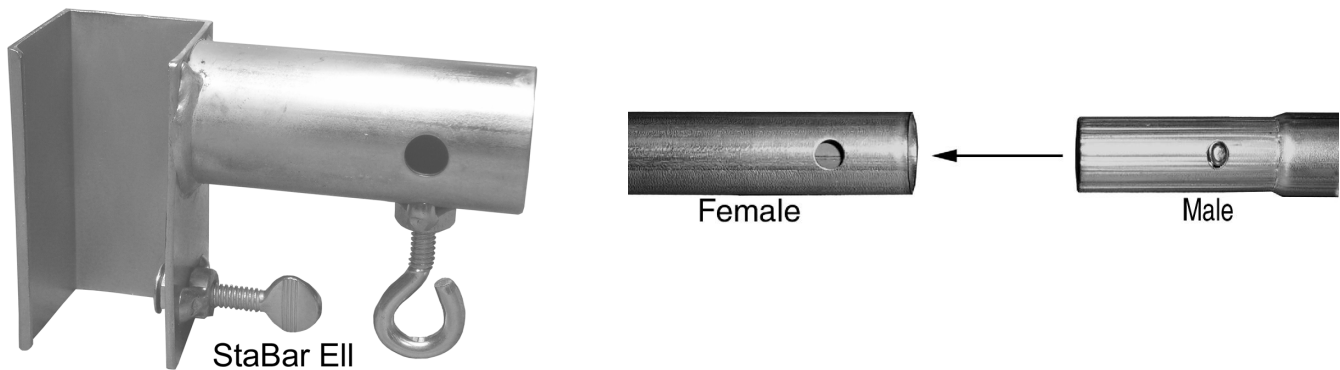

1. Set up your E-Z UP as usual. Slip the two StaBar Ell joints onto the bottom of the two legs between which you will attach your Mesh Panel. Tighten thumbscrews – the joint will flare slightly as you tighten the thumbscrew. It is **not** necessary to apply great pressure when tightening
2. Assemble the StaBar pole by connecting the male and female pole sections – see illustration above.
3. Slide StaBar pole into StaBar joints. The snap-buttons in the StaBars will click into the joints.

IMPORTANT: If setting up on uneven ground requires you to shorten one of your E-Z up legs, re-position your StaBar joints before inserting the StaBar so the StaBar will be level.