


UPPER STABILIZER BARS FOR the E-Z UP CANOPY
(Fits all Pop-up Canopies)
Instructions for Assembly

PARTS LIST:

- (1) StaBar ELL Joint
- (1) Long StaBar ELL
- (2) Long Short 3 Ways
- (3) Male Pole Sections - 61"
- (3) Female Pole Sections – 53 ¼" coded BLUE
- (2) Ball Bungee Cords (for bundling poles)
- (3) Thumbscrews (thread into nuts on ells and 3 ways – see picture)

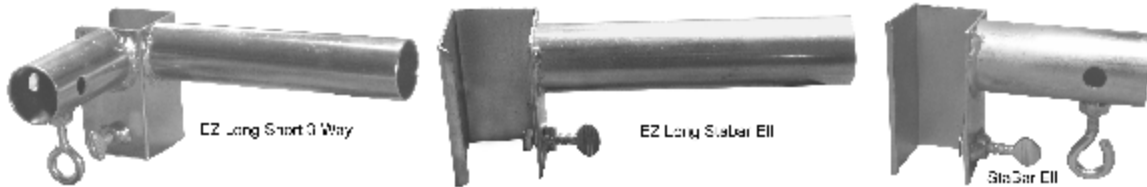

1. Set up your E-Z UP as usual, following your E-Z up setup instructions.



Long StaBar ELL



Long Short 3 Way




Long Short 3 Way



StaBar Ell

2. Install a Long Short 3 way on the top of each rear leg by sliding the open side of the 3 way over the leg as high up as it will go, and fixing it in place with the thumbscrew. See picture
3. Install a long StaBar ELL onto the left front leg so that the long barrel of the ell faces the short barrel of the 3 way on the left rear leg – see picture.
4. Install a StaBar ell on the right front leg so that the barrel of the ell faces the long barrel of the 3 way on the right rear leg – see picture.
5. Assemble 3 Upper StaBar poles by sliding each Female BLUE-coded pole section onto each Male pole section until the snap buttons click into place.

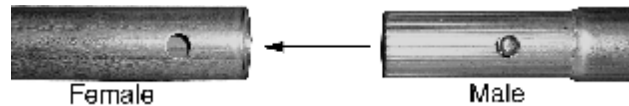

6. Insert the StaBar poles, sliding the colored end as far as possible into the long ear, and then slide back the other way, inserting the snap-buttoned end into the short ear until it clicks into place.

NOTE: Upper StaBar Joints may be removed when closing your canopy so that you will be able to use the carry bag provided with your canopy.