

## Rear Door Frame Assembly Instructions

### To Add Rear Door Frame to Craft Hut, Light Dome, or Showoff Canopy

**Important:** Review these instructions completely **before assembling your canopy.**  
Door frame assembly is put into place as the canopy is being set up.

#### Parts List:

- (1) Canopy Leg Top – 58 ¼” – coded black on one end
- (1) Canopy Leg Bottom – coded black on one end
- (1) Leg Adjuster sleeve
- (1) Canopy Foot
- (1) 22 ½” female pole (for 7 ft. Stabar pole)
- (2) StaBar Ell joints
- (1) Door Ell joint




#### Assembly:

1. While assembling your Craft Hut, Light Dome, or Showoff canopy frame, slide the Door Ell joint onto the rear upper horizontal pole (see picture).
2. When assembling your canopy legs, slide a StaBar Ell joint onto the right rear leg, and a StaBar 3-way joint onto the left rear leg (as seen from in front of booth looking in - see picture below).
3. Assemble the fifth leg as per illustration on sidebar.
4. When canopy is erect on 4 legs, slide the Door Ell joint to approximately 3-ft from the right rear corner and insert the fifth leg into it.
5. Assemble StaBar poles so that you have 2 at 10-ft and 1 at 7-ft (for 7 ft. stabar, use a standard male no-color pole and the 22 1/2” female pole). Attach StaBar poles, beginning with the rear 7 ft. pole, sliding the Door Ell joint into it's final position so that the fifth leg stands plumb.

**Leg Top** →

#### Cut - Away view of rear door frame as seen standing in front of booth looking in

**Note:** This view does not show all canopy parts. Refer to canopy setup instructions for placement of these joints.

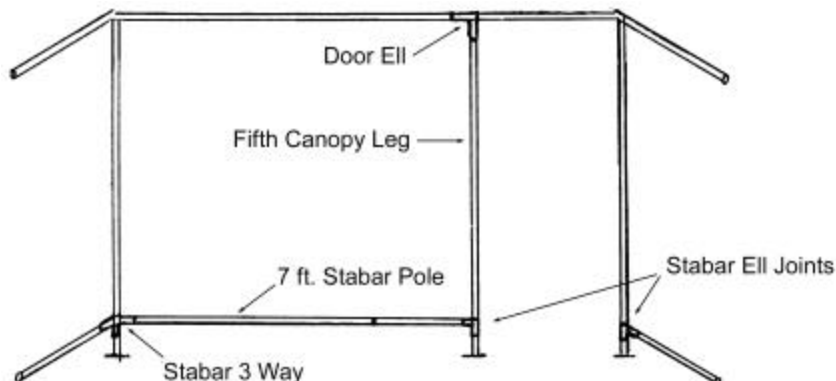

**Leg Adjuster** →

**Leg Bottom** →

**StaBar Ell** →

**Foot** →

