

10 x 15 Mesh Panel Booth Frame


Instructions for Assembly

PARTS LIST:

Poles:

- (14) No Color Male Pole Sections - 61"
- (8) No Color Female Pole Sections - 58 1/4"
- (6) Leg Bottoms – female pole sections – 24"
- (3) Double Snap Button Poles – 56 1/2"

Connecting Hardware:

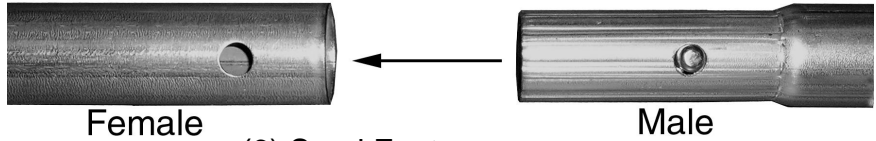



- (4) 3 Way Corner Joints
- (2) StaBar Ell Joints
- (1) Stabar Tee Joint
- (12) Ball Bungees (for bundling poles)
- (6) Sand Feet
- (2) StaBar 3 Way Joints
- (2) 4 Way Joints
- (39) Thumbscrews (thread onto joints)



Assembly:

1. Connect male and female pole sections. This will give (8) 116 1/2 " no color horizontal poles, and (6) 82 1/2" leg poles. There are also (3) poles measuring 56 1/2" for the 5' section of the frame. These need no assembly.
2. Assemble 5 legs with a Stabar ell on each of two legs, a Stabar 3 way on each of two legs, and a Stabar Tee on one leg. All white arrows point down. Slide a foot joint onto the bottom of each leg. The front middle leg has no Stabar parts. See illustration.
3. Lay out 116 1/2 " poles, 56 1/2" (5') poles, and connecting joints as per diagram below. Next, connect poles to corner joints. If you are using one or more French Walls, install the offset leg joints at this time (as described in step 1 of your French Wall instructions).

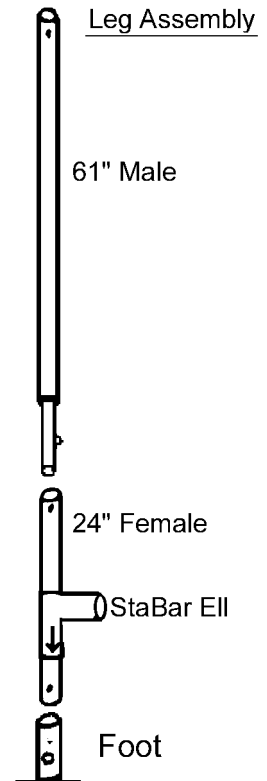

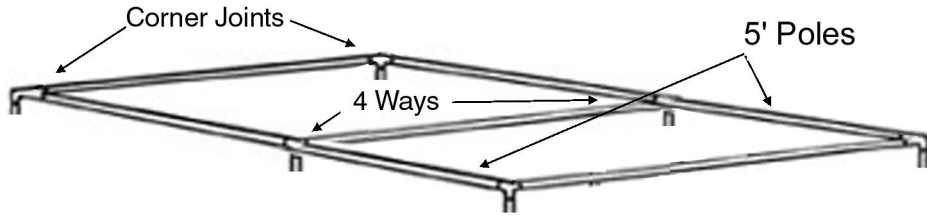

4. The next portion of the procedure can be done by one person but is easier with two people. Ask a neighbor for a hand (It will only take a minute).
5. With each person holding a rear leg (the ones with StaBar 3 ways attached), Lift the rear two corners of the frame, and insert a leg into each of the rear corner joints. Then, insert the middle leg (with stabar tee attached) into the 4 way joint.
6. Lift the front corners of the frame, and insert a leg (with StaBar Ell attached) into each of the front corner Joints, then insert the leg with no stabar parts into the front 4 way.
7. Attach Stabar poles (lower horizontal poles) to the frame by inserting the poles into the StaBar joints until they click into place. Attach the rear poles FIRST, then the sides.
8. This completes the basic frame:



9. To install your Mesh Panel display walls, follow the setup instructions included with your Mesh Panels. To add a French wall frame to your basic frame, refer to your French wall Mesh Panel instructions.