

# The ProMaster 10 x 15 Indoor Booth Frame

## Instructions for Assembly

### Parts List - Hardware:

- (4) Three Way Joints      (2) Ell Feet      (2) Ell Joints      (1) Tee Joint  
 (8) Ball Bungees (for bundling poles)      (1) Tee Foot      (27) Thumbscrews



3-Way



Ell Foot



Ell



Tee Foot



Tee

### Parts List - Poles:



Female



Male



- (11) Male Pole Sections - 61"      (6) Female Pole Sections - 58 1/4"  
 (5) Female Pole Sections - 22 1/2" (for 7 ft. leg poles)  
 (2) Pole Sections - 56 1/2" with snap buttons at both ends (for 5' wall section)

### Optional:

- (5) Female Pole Sections - 34 1/2" - For 8 ft. wall height **or**  
 (4) Female Pole Sections - 34 1/2" - For 8 ft. depth conversion

### Assembly:

1. Connect all Pole Sections and thread thumbscrews into all joints:  
 Connect all male pole sections to all female sections. This will create six 10 ft. poles, (the horizontals), and four shorter 80 1/2" poles (the legs). There are also two (one-piece) 5 ft. poles. Note: For 8 ft. wall height, the legs will measure 92 1/2".
2. Assemble the floor frame and the top frame separately as per the illustration below.

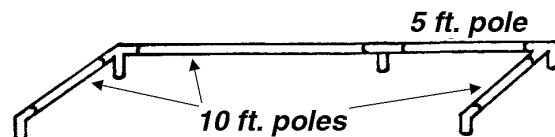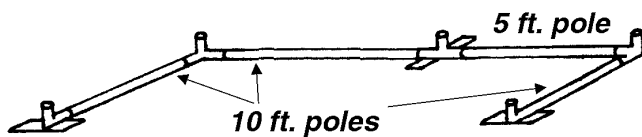


- a. Connect Ell-feet and 3-way Joints with horizontal poles - this is the floor-frame.
- b. Connect Ell Joints and 3-way Joints with horizontal poles - this is the top-frame.

Note: Be sure that the open (see through) barrels of all 3-way Joints face up and down - so that thumbscrews will not interfere with drapery.

3. Insert a leg into each of the top-frame 3-way Joints. Then insert a leg into each of the top-frame Ell Joints. This stage of assembly is best accomplished with a helper. Lift the top frame by the 3 way joints, and insert the legs, then lift the ell joints and insert the legs. Insert the last leg into the tee joint. Don't be shy about asking for help; it's only for a minute or two.
4. Insert front leg bottoms into floor-frame Ell-feet, rear legs into floor-frame 3-way Joints, then fifth leg into the tee foot.
5. Tighten all thumbscrews.

The finished frame:

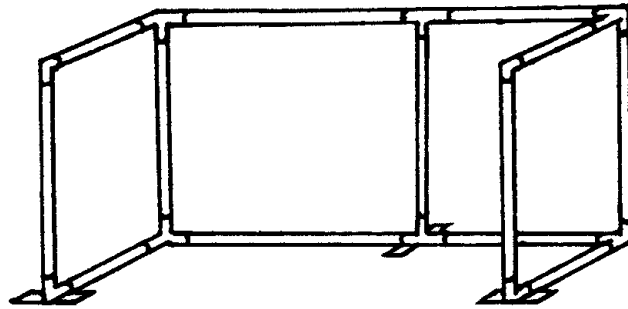

6. DRAPERY: Curtains can be slid onto upper horizontal poles before inserting into 3 way and ell joints, **OR** you may remove one end of the upper horizontal from the ell joint after assembling the unit, slide curtain onto pole, then re-insert pole into ell joint.
 

\*\*Note: If using light pole, side-curtains must be in 2 sections, or specially made to accommodate light pole's Tee Joints (see light pole instructions).
7. CONVERSION POLES: If you are using conversion poles to change the dimensions of your booth (i.e. 10 x 10 to 8 x 10), exchange the 58 1/4" female pole with a shorter female pole (34 1/2" for 8 x 10). Similarly, for 8' high legs exchange the 22 1/2" female poles with 34 1/2" poles.