


EASY RISER Set-up Instructions

(For 7 ft. tall TrimLine Canopy with StaBars)

The EASY RISER lets you lift the roof without needing assistance from a second person.

- PARTS: (1) 27" Female Pole Section (with chrome end cap)
(1) 17" Female Pole Section (with chrome end cap)
(2) StaBar Ell Joints

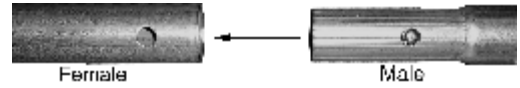

GETTING READY TO RAISE THE ROOF

1. Attach the EASY RISER poles (17' and 27" female pole sections) to two of the (61") male pole sections from your **StaBar Kit**. The chrome end caps will be on the bottom of the EASY RISER pole.
2. Follow Steps 1 and 2 of the general instructions for assembly of your TrimLine canopy.
3. Slide StaBar Ell joints onto the front and back upper horizontal poles of your TrimLine (with the white arrows facing away from the center) as you set the TrimLine up, following steps 3 and 4 of your TrimLine Setup instructions. See the illustrations below.



TrimLine owners - if you position your TrimLine with the vents facing front and rear (as in the picture above), the Ell joints go on the same pole as the Sliding Tee joint. If the roof is oriented with the vents to the sides, the Ells go on the purple-coded poles and must slide on BEFORE the Arch-support joints.

** Do not tighten the thumbscrews as these joints must be allowed to swivel during set-up.

4. Attach the shorter EASY RISER pole to the front StaBar Ell joint and the longer EASY RISER pole to the rear Ell joint – so that both poles lie inside the frame.
5. Following the general canopy instructions join all roof frame pieces, including the arches, assemble the canopy legs, and spread the canopy top over the frame.

6. If space allows, position the assembled roof frame approximately two feet further back into your space than you wish the completed canopy to stand. Lift the front of the canopy roof until the EASY RISER leg swings down to support the roof. Attach the two front legs, remove the front EASY RISER Leg and disassemble.

Note: You may wish to install your telescoping legs with the leg in the extended position (recommended), or you may wish to install the telescoping legs in the “collapsed” position until all four legs are in place, then extend each leg while in place.



7. Step inside the half-raised roof and secure the top as per the general instructions: [TrimLine Instructions](#) - page 5, step 4. Next, go around to the back of the booth.

8. Lift the rear of the canopy roof until the EASY RISER pole is vertical and supporting the roof. Insert the rear legs, remove the EASY RISER leg and disassemble. [Turn EASY RISER Ells so they face up and secure with thumbscrew.](#)

Important Note:

If you are not tall enough to lift the rear of the booth, either request a few seconds help from a taller neighbor **or** lift as high as you can, grasp the EASY RISER leg and use it to push the roof up the rest of the way.



9. To take the canopy down, begin at the front. Reinstall the front Easy Riser pole, remove the legs, remove the easy riser pole while holding the canopy frame up, and lower the booth to the ground.
10. Alternately, you may reinstall the front Easy Riser pole, remove the front legs, and ask a neighbor for a moments help lowering the booth. Repeat the procedure at the rear of the booth to finish lowering the frame to the ground.

A word of caution for those windy days

Any canopy is vulnerable to a wind gust until it is thoroughly fastened down. Be especially careful when you have the front legs installed and the back of the roof resting on the support leg. If it is really windy, ask for help from a neighbor.